



expotent budget PRO 4,5 x 3 m			
Teile Nr.*	Ersatzteil	Art. Nr.	
1	Expotent Sparepart Budget PRO Outerleg Corner 156,5cm	60222	
2	Expotent Sparepart Budget PRO Innerleg Corner 96,7cm	60223	
3	Expotent Sparepart Budget PRO 2-way bracket for outerleg corner	60225	
4	Expotent Sparepart Budget PRO 2-way glider for outerleg corner	60226	
5	Expotent Sparepart Budget PRO Pushbutton for Innerleg	60227	
6	Expotent Sparepart Budget PRO Scissorprofile 143,2cm	60228	
7	Expotent Sparepart Budget PRO 3-way Connector	60229	
8	Expotent Sparepart Budget PRO Screw for Scissors	60230	
9	Expotent Sparepart Budget PRO Screw with Captive Nut	60231	
10	Expotent Sparepart Budget PRO Peakpole 3x3m, 4,5x3m, 6x3m (2-parts)	60232	
11	Expotent Sparepart Budget PRO Peakpole Closure Cap	60233	
12	Expotent Sparepart Budget PRO 4-way bracket for Peakpole	60234	
13	Expotent Sparepart Budget PRO 4-way glider for Peakpole	60235	
w/o drawing	Expotent Sparepart Budget Set for Rope and Nails (4 nails/4 ropes)	60215	
w/o drawing	Expotent Sparepart Budget PRO Bag for Frame 4,5x3m	60239	
w/o drawing	Expotent Sparepart Budget PRO dust-protection-cover for Frame 4,5x3m	60250	