


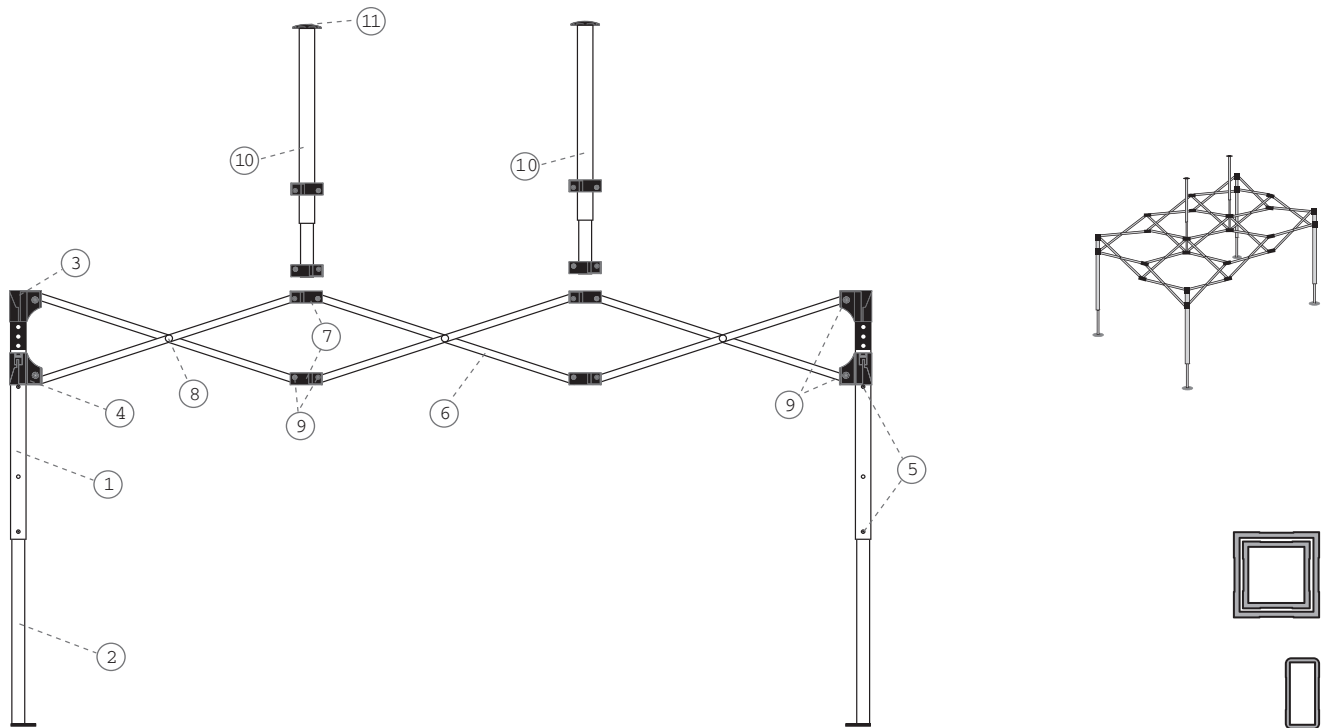

expotent basic 6 x 3 m			
Item Nr.*	Sparepart	Art. Nr.	
1	Expotent Sparepart Basic Outerleg Corner 148,8cm	60001	
2	Expotent Sparepart Basic Inner Leg Corner 122cm	60002	
3	Expotent Sparepart Basic 2-way bracket for outer leg corner	60003	
4	Expotent Sparepart Basic 2-way glider for outer leg corner	60004	
5	Expotent Sparepart Basic/Premium Pushbutton	60005	
6	Expotent Sparepart Basic Scissorprofile 144,5cm	60007	
7	Expotent Sparepart Basic 3-way Connector	60009	
8	Expotent Sparepart Basic Screw for Scissors	60010	
9	Expotent Sparepart Basic Screw with Captive Nut	60011	
10	Expotent Sparepart Basic Peakpole 3x3m, 4,5x3m, 6x3m (2-parts)	60013	
11	Expotent Sparepart Basic Peakpole Closure Cap	60014	
12	Expotent Sparepart Basic Outerleg Middle	60017	
13	Expotent Sparepart Basic Innerleg Middle	60018	
14	Expotent Sparepart Basic 3-way Bracket for Outerleg	60019	
15	Expotent Sparepart Basic 3-way Glider for Outerleg	60020	
w/o drawing	Expotent Sparepart Basic 4-way Bracket für Peakpole	60015	
w/o drawing	Expotent Sparepart Basic 4-way Glider for Peakpole	60016	
w/o drawing	Expotent Sparepart Cord	60021	
w/o drawing	Expotent Sparepart Peg	60022	
w/o drawing	Expotent Sparepart Basic Bag for Frame 6x3m	60026	